

S2 Maintenance

Hub Not Shifting
(Assuming fixing washer has come loose)



Step 1:
Remove LH Nut
And Cone



Step 2:
Remove Internal. No
proprietary tool is
needed. Use a
hammer and punch,
hook spanner, or
adjustable spanner to
drift internal out. Left
for loose.



Step 3:
Hold Axle
securely, check if
Convex Fix
Washer is loose.



Step 4:
Tighten Nut 1
and Nut 2.

Replace internal
and hub cones.
Adjust hub cones.

Nut 2

Nut 1